GB

Installation and operating instructions

Dimplex

TRS 130 C, TRS 200 W Towel rail

T9623gb 04/02/A

1. Warnings

1.1 General

You are requested to read all the information in these instructions attentively. It gives important information concerning safety, installation and mounting, the use and servicing of the appliance. Keep these instructions carefully and if applicable pass them on to the final owner.

The manufacturer is not responsible if the following directions are not respected:

- If the appliance is damaged, check immediately with the supplier before installation.
- In order to guarantee the safe operation of the towel rail, it is only to be mounted and connected in accordance with the instructions.
- Where a fixed connection is made, it must be installed by a competent electrician in accordance with the relevant safety regulations.
- The appliance is only to be used for its stated uses.
- In the event of a fault disconnect the electricity supply to the appliance (pull out the plug).
- Where the appliance is out of operation for a long period, disconnect the electrical supply to the appliance.

1.2 Specific to this appliance

The towel rail can only be used to dry and heat towels and articles of clothing.

It is only suitable for domestic use or similar purposes within enclosed spaces.

The specified minimum clearances are to be respected.

- It is particularly important that the appropriate safety regulations for bathrooms, showers, swimming pools etc. are fulfilled. The heater is to be installed in such a way that it cannot be touched from a bath or shower and that the switch cannot be operated. The installation can only take place in safety zone 3 according to VDE 0100 Part 701.

2. Description of the appliance

Type	Heating capacity Watt	Finish	Weight kg
TRC 130 W	90	chrome	4.5
TRS 200 W	150	white	6.5

Supply voltage : 1/N/PE~ 230V, 50Hz

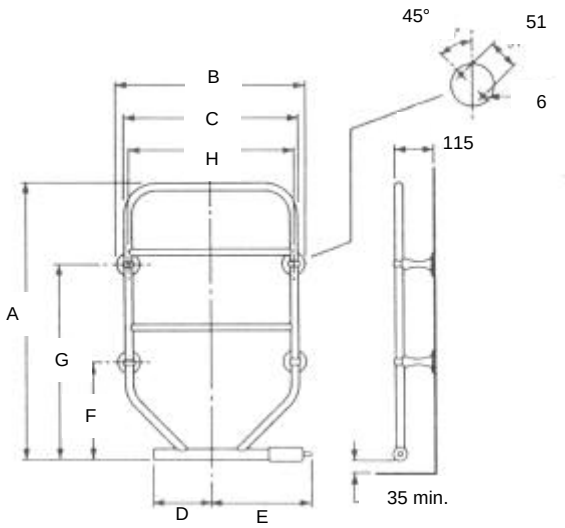

Type	A	B	C	D	E	F	G	H
TRC 130 W	850	570	535	180	285	300	600	510
TRS 200 W	850	825	790	255	355	300	600	760

The appliances are provided with a supply cord and earthed plug with an inbuilt rocker switch and indicator light. The appliances are splashproof to IP 44, construction class I.
The plug provided with the towel rail is not splashproof and cannot therefore be connected in the safety zone.

3. Minimum clearances, mounting

Do not locate the towel rail immediately below a fixed socket outlet. The stated minimum clearances to items of furniture, walls, floors and ceilings are to be respected.

Clearance to the side at least 50 mm
Clearance underneath at least 35 mm
Clearance above at least 50 mm

When mounted on the wall, the towel rail must be mounted vertically as shown. The appliance can be fixed with the connection on either the left or the right side.

The wall brackets supplied should be fitted as follows:

1. Push the clip (A) over the towel rail tube.
2. Place the bracket (B) over the clip with the nut and push it firmly against the towel rail tube.
3. Insert screw (C) through the hole in the bracket (B) and screw it lightly into special nut.
4. Position the complete bracket exactly on the towel rail and tighten the screw fully.
5. Mark the position of the holes on the wall in accordance with the mounting sketch, drill holes for the matching screws and insert the wall plugs.
6. Fix the appliance horizontally on the wall by tightening all screws.

4. Electrical connection

The towel rail can be connected by either a fixed connection (only made by a competent electrician) or an earthed plug (complete with integral switch and indicator lamp). Moving a socket or replacing the supply cord (with a longer one) can only be carried out by a qualified electrician respecting the appropriate requirements.

5. Faults

If the appliance is not heating, please check whether the appliance is switched on, then whether it is switched on at the distribution board or the fuse is in order. If this is so, call your electrical installer. Give him the "order no." for the heater (see rating label). Repairs and operations within the heater can only be carried out by a competent electrician or customer serviceman.

6. Cleaning the appliance

The heater does not require any special maintenance or attention. Switch off the heater before cleaning and allow to cool. The outside can be cleaned by wiping it over with a soft damp cloth and then dried. Do not use abrasive cleaning powders or furniture polish, as this can damage the surface finish.

7. Guarantee

The guarantee terms issued by our representatives in the country of purchase are applicable for this appliance. The dealer from whom the appliance was purchased will provide details at any time on request. Presentation of a receipt is essential for the implementation of the guarantee terms.